

## Slow Boom functions after new Telehandler joystick install

### Joystick Calibration

Tools Needed:

None

Model:

**GTH6K**  
**GTH8K**  
**GTH10K**

**Genie**  
A TEREX BRAND

**TECH▲PRO**<sup>TM</sup>

SERVICE AND TECHNICAL TRAINING

# TECH-TIP

## Tech Tips Safety Rules



### **Danger**

Failure to obey the instructions and safety rules in the appropriate Operator's Manual and Service Manual for your machine will result in death or serious injury. Many of the hazards identified in the operator's manual are also safety hazards when maintenance and repair procedures are performed.

### **Do Not Perform Maintenance Unless:**

- You are trained and qualified to perform maintenance on this machine.
- You read, understand and obey:
  - manufacturer's instructions and safety rules
  - employer's safety rules and worksite regulations
  - applicable governmental regulations
- You have the appropriate tools, lifting equipment and a suitable workshop.

The information contained in this tech tip is a supplement to the service manual. Consult the appropriate service manual of your machine for safety rules and hazards.


# TECH-TIP

## Step 1

Start the engine

## Step 2

Within one minute of the engine starting, press and hold the Sway Function Enable Button, While holding the Sway Function Enable Button move the Auxiliary Function Rocker Switch three times to the right and then three times to the left.

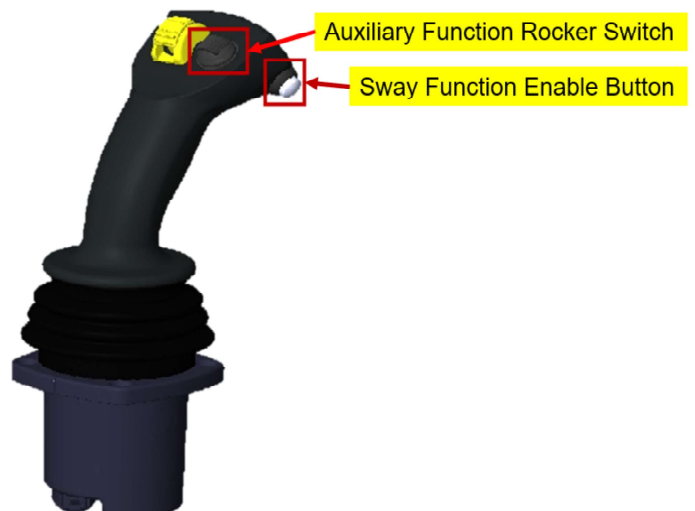

# TECH-TIP

## **Step 3**

Give the Joystick about one minute to gather the unit configuration from the engine ECM and then test the Joystick confirm the units function speeds meet factory specifications found in the service manual

## **Step 4**

For further assistance contact Genie Product Support at 1-800-536-1800